






agora Goals are 100% aerospace-grade aluminum for all-weather, heavy-duty performance and lightweight convenience and safety. Push-button connections. Two person assembly required.

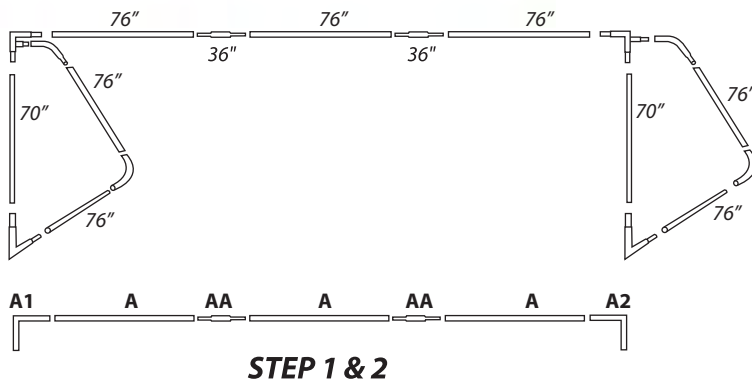

ASSEMBLY:

1. Lay the pieces on the field and assemble Crossbar in the following order:
A - AA - A - AA - A
2. Connect Top Corner Pieces (**A1 and A2**) to left and right side of Crossbar, respectively.
3. Connect Side Post (**B**) to Crossbar.
Note: Side Posts are shorter pieces with warning stickers.
4. Connect Bottom Corner pieces (**D1**) to Side Posts.
5. Assemble Backdrop in the following order:
C1 - C2 - C3 - D
6. Connect Backdrop to Goal Frame.
Note: Must be inserted by two people simultaneously for proper connection.
7. Between two adults, carefully raise and rotate the goal onto its base.
8. Anchor down goal.

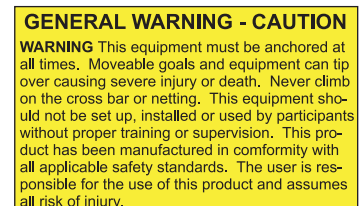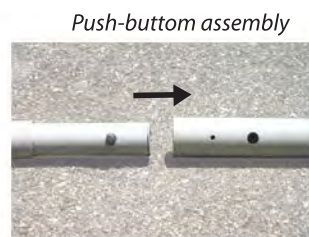


AGORA BACK-BOTTOM BARS (SA-G721B)



Fits Semi-Pro & Premier 7'X21' Goals



agora Back-bottom Bars are 100% rust-proof aerospace-grade aluminum. White powder-coated.

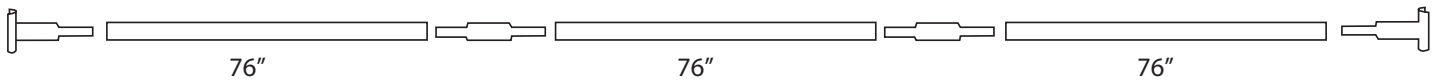

ASSEMBLY:

1. Attach pieces together as shown in illustration above.
2. Insert bolts through the holes located at the base of the goal. Connect Back-bottom bar to the bolts (Figure A).
3. Fasten nut by using wrench and allen wrench included (Figure B).
4. Attach other side of the bar by repeating step 2-3.

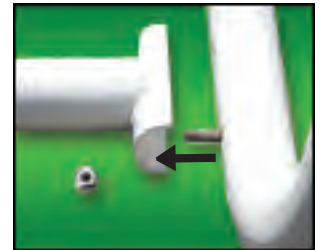


Figure A

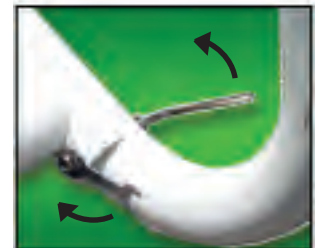


Figure B

