
GOAL SAFETY INSTRUCTIONS

IMPORTANT! PLEASE READ BEFORE GOAL ASSEMBLY

- Read all instructions before beginning assembly.
- 2 or more adults may be required to assist in assembly.
- · Unpack and inspect all parts / hardware for quality and structural integrity. Contact Customer Support if any item is damaged or missing.
- All Safety and Warning labels must be visible.
- Securely anchor or counterweight movable goals at ALL times.
- Prevent tip-over injuries by NEVER leaving goal unattended or unsecured. Goal should be anchored, chained to another goal or to an adjacent fence post of high structural integrity, or stored away from child access.
- Educate players, coaches, maintenance personnel and other individuals using / interacting with the goal on the proper usage, safety measures, and potential hazards of movable soccer goals.
- Instruct players, coaches, and other members NEVER to climb goal net or frame.
- Goal should only be moved by proper number of trained adults with extreme caution.
- Goal should NEVER be used on unleveled playing fields.
- Net should be removed when goal is not in use.
- Disassemble goal during off-season or prolonged disuse.

 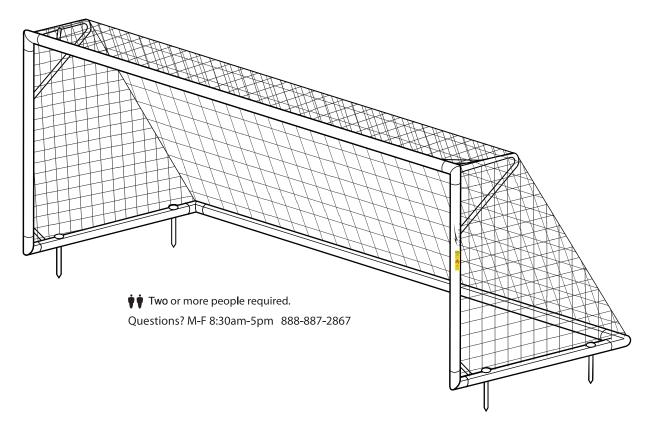


© Sator Sports, Inc. Questions? M-F 8:30am-5pm 1-888-887-2867 1/5 Rev_2023-08-24

PARTS, HARDWARE, & TOOLS

Important! All directional descriptions (i.e. Left, Right) are based on the front of the goal facing you. Hardware may be housed in one or more separate boxes. Please open all boxes / packaging before assembly.

(Images not to scale)



A - Top Crossbar (1) Contains Warning Label



B - Bottom Crossbar (1) Contains no labels



C - Left Post (1) With channel system facing back, AGORA logo on left



D - Right Post (1) With channel system facing back, AGORA logo on right



E - Base (2) Contains no labels. Has 5 holes on each end.



F - Post

Brace (2)



G - Net (1)



H - Net Clips (1 Set)



 
I - 14" Steel Anchor Nails (4)

 


Q - Crossbars/Posts Brackets (8) 2 holes, attaches to parts A, B, C, and D



R - Base Bracket (4) 4 holes, attaches to Bases E





brackets

CC - Backdrop

Shoulder (2) Includes pre-installed bolts and angled

S - Backdrop Lock

Backdrop Lock, Bracket, Bolt, and Washer comes

 
pre-installed on Backdrop Arm (DD) and Backdrop

Bracket (6)

Shoulder (CC)

DD - Backdrop Arm (2) Includes pre-installed bolt and

angled bracket







J - 2" Hex Bolt (4) Semi thread



K - 1 ½" Hex Bolt (4) Semi thread



||||||||||| **L** - ¾" Hex Bolt (20) Full thread



M - 3/8" Hex Nut (4) Use with 2" Hex Bolt



N - 3/4" Washer (28)




O - 11/16" Wrench (1)



P - Allen Wrench (1)



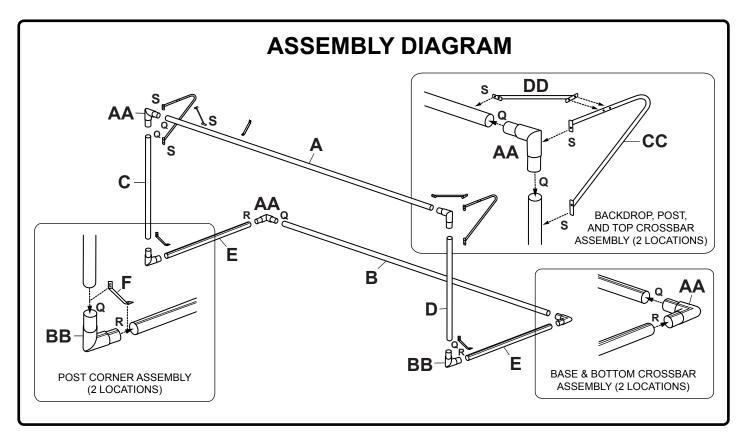

ASSEMBLY START

Connect Side Posts


1. Connect Left Post (C) to Crossbar Corner (AA) following **FIG. A**.

Note: Crossbar/Posts Bracket (Q) may already be pre-inserted into the top of the Side Post OR Crossbar Corner. Please remove plastic ties before bolting.

2. Connect Left Post (C) to Post Corner (BB) following FIG. B.

Note: Crossbar/Posts Bracket (Q) may already be pre-inserted into the bottom of the Side Post OR Post Corner. Please remove plastic ties before bolting..

3. Perform steps #1 and #2 for Right Post (D).

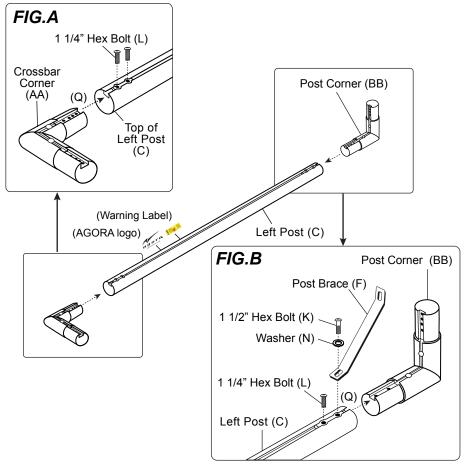


Questions? M-F 8:30am-5pm 1-888-887-2867 3/5 © Sator Sports, Inc. Rev_2023-08-24

Connect Goal Face

4. Connect Left and Right Assembled Posts to Top Crossbar (A) following *FIG. C*.

Note: Crossbar/Posts Bracket (Q) may already be pre-inserted into the Crossbar OR Crossbar Corner. Please remove plastic ties before bolting.

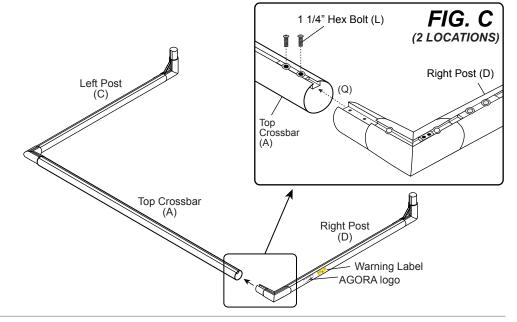


Connect Base

5. Connect Bottom Crossbar (B) to Crossbar Corners (AA) following FIG. D.

Note: Crossbar/Posts Bracket (Q) may already be pre-inserted into the Bottom Crossbar OR Crossbar Corner. Please remove plastic ties before bolting.

6. Connect Base (E) to Crossbar Corners (AA) following FIG. D.

Note: Base Bracket (R) may already be pre-inserted into the Base Bar. Please remove plastic ties before bolting.

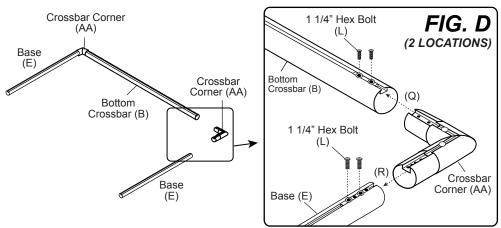


Connect Face to Base

7. Raise Bottom Crossbar/Base assembly and insert into Top Crossbar assembly following FIG. E. Ensure all connections are secure and firmly pushed prior to bolt assembly.

Note: Base Bracket (R) may already be pre-inserted into the Base Bar. Please remove plastic ties before bolting.

8. Tighten bolts on both left and right sides.

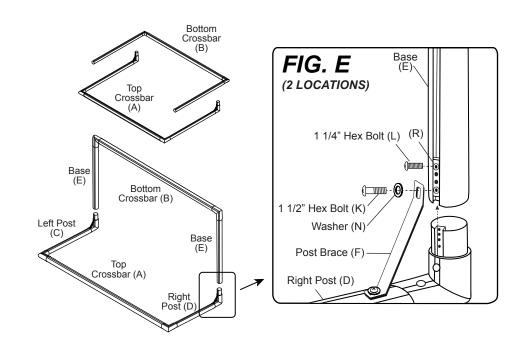



Questions? M-F 8:30am-5pm 1-888-887-2867 4/5 © Sator Sports, Inc. Rev_2023-08-24



Connect Backdrop


9. Connect Backdrop Shoulder (CC) and Backdrop Arm (DD) following FIG. F. Simply screw Backdrop Shoulder into channel system. Note: Backdrop Lock Bracket (S) comes pre-installed on Backdrop Arm (DD) and Backdrop Shoulder (CC).

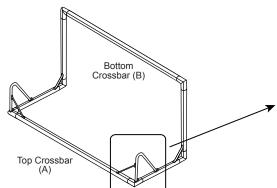


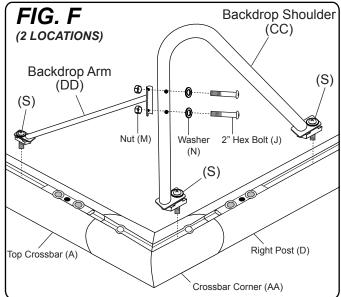

Attach Net

10. Attach top half of net using provided Net Clips (H). Fit net through Net Clip loop, insert net into channel system, and twist to lock. Next, carefully flip goal over (Bases should now sit on ground) and attach remaining bottom half of net to bottom of goal.

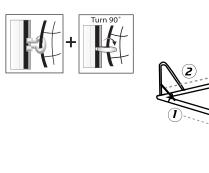

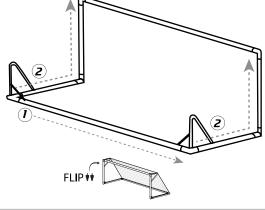

Anchor

11. Anchor goal using provided Steel Anchor Nails (I).*

 
*Also compatable with other semi-permanent and permanent anchors (sold separately).




STORAGE

Goal tip-over can cause serious injury or even death. Most cases occur when goals are left unattended. Remove net and disassemble goal during off-season or prolonged disuse using one of the methods below.


1. Anchor or chain one goal to another



 2. Fold goals face down



 3. Chain Goals to a nearby fence or other sturdy structure



© Sator Sports, Inc. Rev_2023-08-24 Questions? M-F 8:30am-5pm 1-888-887-2867 5/5