
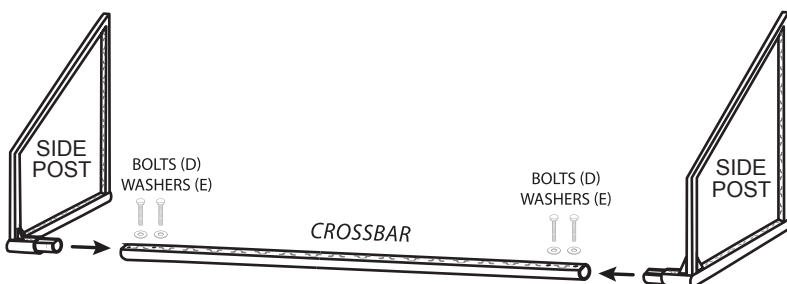


**Attention!** Read all instructions prior to assembly


Three or more people required.

Questions? M-F 8:30am-5pm 1-888-887-2867

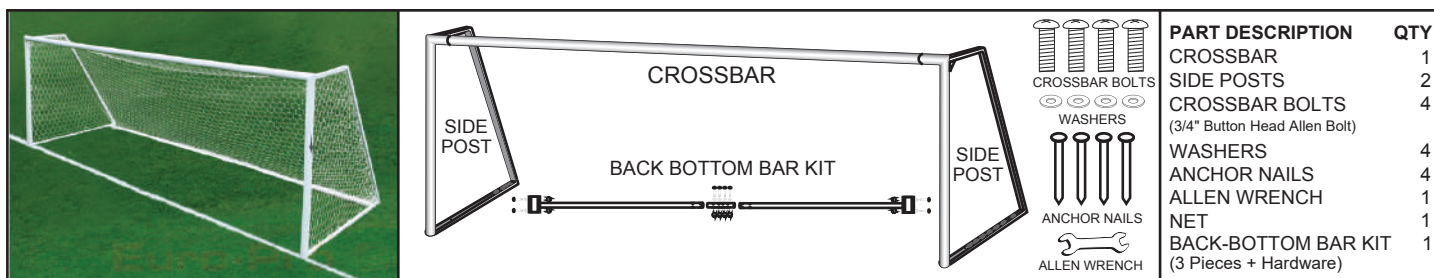


## 1 CONNECT THE SIDE POSTS

1. Lay crossbar on field with net attachment side facing up.
2. Insert side posts into crossbar.
3. Use anti-rust lubricant on bolts and washers and tighten with allen wrench. **NOTE: Do not overtighten as damage may occur.**

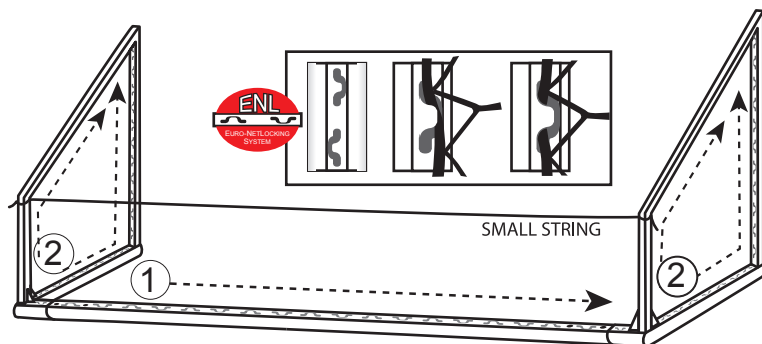

## 2 ATTACH NET

1. With face of goal still on the ground, insert net into net attachment slots. Be sure to stretch net evenly.
2. Start with crossbar, pulling net tight between each hole.
3. After crossbar, connect net to side posts as shown, finishing at the back corner.
4. Small String: After attaching net, tie up top back corners with small string.

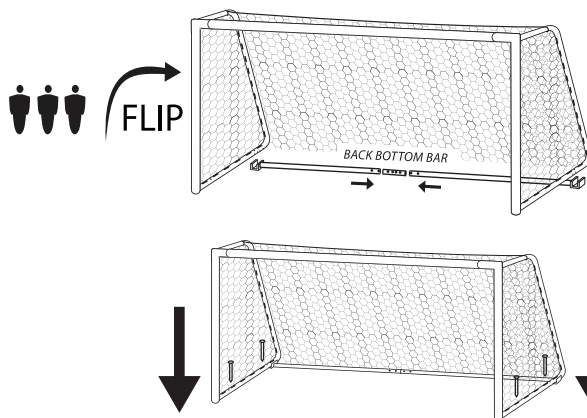

## 3 ATTACH BACK BOTTOM BAR

Back Bottom Bar (BBB): Connect the rods together (bolt first, then washer, BBB, washer, nut). Then attach BBB to the goal by using the hardware included. Small String 2: Wrap second small string through the BBB and net.

## 4 ANCHOR

Place goal at desired location, anchor down and enjoy!  
Please call with any questions. 1-888-887-2867

## ! SAFETY INSTRUCTIONS

 


Check for structural integrity and proper connecting hardware before every use. Replace damage or missing parts or fasteners immediately. Securely anchor or counterweight movable goals at ALL times. Always instruct players, managers, coaches, trainers, teachers, maintenance and all other personnel who might come into contact with the goal on the safe handling of and potential dangers associated with movable soccer goals. Always exercise extreme caution when moving goals and allow adequate manpower to move goal of varied sizes and weights. Movable soccer goals should only be moved by authorized and trained personnel. NEVER allow anyone to climb on the net or goal framework. Movable soccer goals should only be used on LEVEL fields, NEVER on a slope or hill area. Remove nets when goals are not in use. Most of the tipover injuries occurred when goals were unattended. Anchor or chain one goal to another, to itself in a folded down position, or to nearby fence posts, dugouts, or any other similar sturdy fixture when not in use. If this is not practical, store movable soccer goal in a place where children cannot have access to them. Fully disassemble goals for seasonal storage

**agora BACK-BOTTOM BAR for Euro-Pro Goal****agora Back-Bottom Bars**


100% rust-proof aerospace-grade aluminum.  
White powder coating.

**ASSEMBLY:****1. CONNECT BACK-BOTTOM BAR (BBB)**

Insert Center Connector into one end of BBB.  
Insert in order: Bolt, Washer, BBB, Center Piece, Washer, Nut.  
Fasten nuts with wrench and allen wrench.  
Insert other end of BBB and repeat.

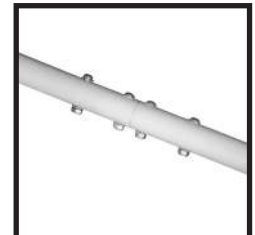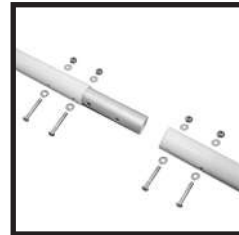**2. ATTACH BBB TO GOAL**

Line up holes and insert in order from outside to inside:  
Bolt, Washer, Goal, Washer, Nut.  
Repeat at other end.

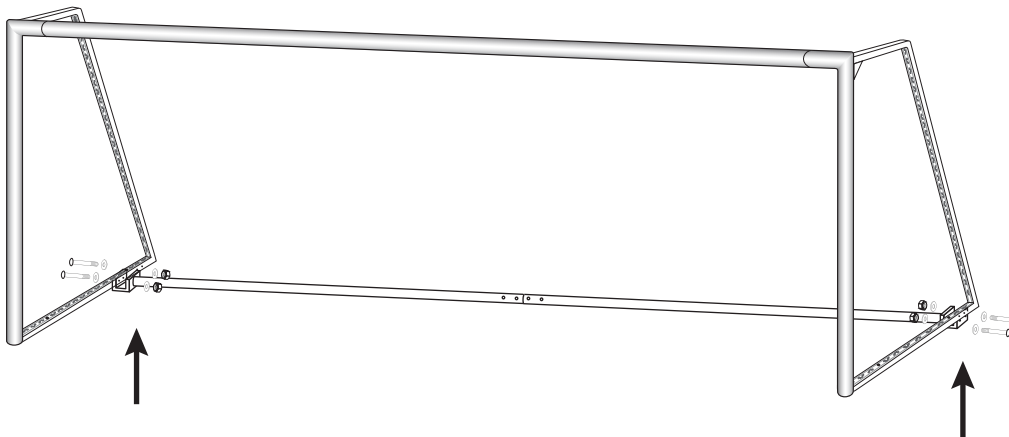**GENERAL WARNING - CAUTION**

**WARNING** This equipment must be anchored at all times. Moveable goals and equipment can tip over causing severe injury or death. Never climb on the cross bar or netting. This equipment should not be set up, installed or used by participants without proper training or supervision. This product has been manufactured in conformity with all applicable safety standards. The user is responsible for the use of this product and assumes all risk of injury.




agorasoccer.com

**Goal tipover can cause serious injury or even death. Most cases occurred when goals were left unattended.**


**When not in use, remove net and store using one of the below methods.**

**Fully disassemble for seasonal storage.**


1. Anchor or chain one goal to another

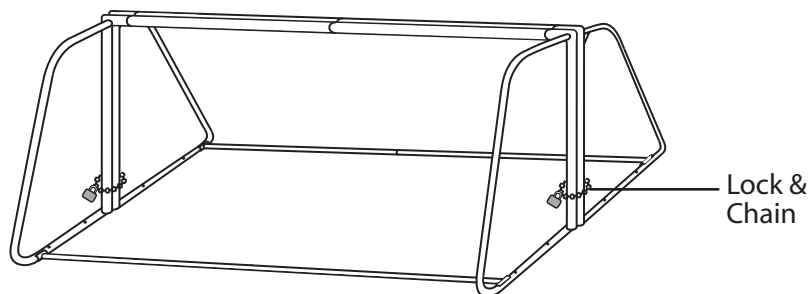

2. Fold goals face down

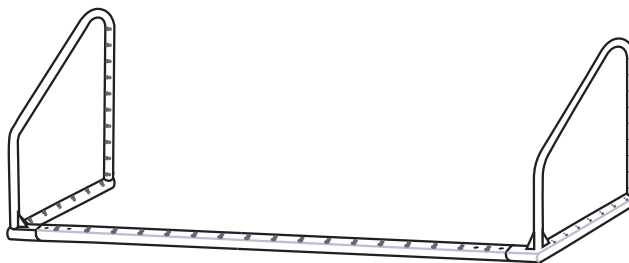

3. Chain Goals to a nearby fence or other sturdy structure.

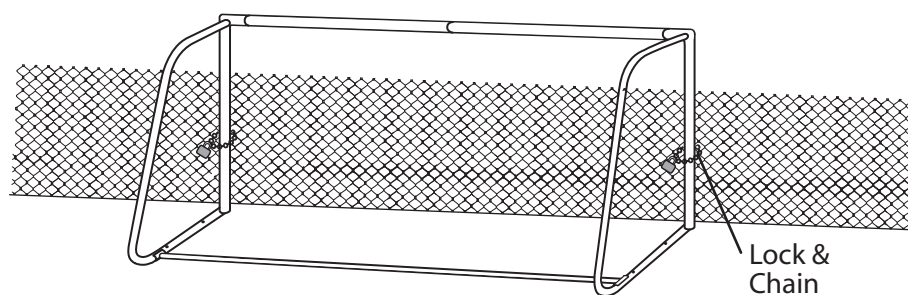

**! SAFETY INSTRUCTIONS** Check for structural integrity and proper connecting hardware before every use. Replace damage or missing parts or fasteners immediately. Securely anchor or counterweight movable goals at ALL times. Always instruct players, managers, coaches, trainers, teachers, maintenance and all other personnel who might come into contact with the goal on the safe handling of and potential dangers associated with movable soccer goals. Always exercise extreme caution when moving goals and allow adequate manpower to move goal of varied sizes and weights. Movable soccer goals should only be moved by authorized and trained personnel. NEVER allow anyone to climb on the net or goal framework. Movable soccer goals should only be used on LEVEL fields, NEVER on a slope or hill area. Remove nets when goals are not in use. Most of the tipover injuries occurred when goals were unattended. Anchor or chain one goal to another, to itself in a folded down position, or to nearby fence posts, dugouts, or any other similar sturdy fixture when not in use. If this is not practical, store movable soccer goal in a place where children cannot have access to them. Fully disassemble goals for seasonal storage.